

pedaltrain

POWERTRAIN 1250 INSTALLATION

Thank you for purchasing a Powertrain 1250. This document will provide you with instructions for mounting the Powertrain 1250 under a Pedaltrain pedal board.

Tools required:

- 1) Phillips head screwdriver
- 2) 1/8" or 3mm drill bit and drill

Inventory:

- 1) Mounting template (included in box or downloadable here: <http://www.pedaltrain.com/1250>)
- 2) Mounting screws (included in box, labeled "For Mounting")



Mounting Template and Mounting Screws

Before you start:


Please be reminded that brackets are not needed to mount the Powertrain 1250. The brackets included with Pedaltrain pedal boards are intended for Voodoo Labs products only.

Step-by-step guide:

- 1) Locate the template (included in the box).**
 - a. If needed, a replacement template can be downloaded here <http://www.pedaltrain.com/1250>.
 - b. Once downloaded, the template should be printed and cut out along the outside edge. Do not resize the template.
- 2) Locate desired position of Powertrain 1250.**
 - a. Many players choose the center of their Pedaltrain, but Powertrain 1250 can be mounted anywhere along the underside of a Pedaltrain according to your needs.
 - b. Some Pedaltrain models have "portholes" in the front of the board. Powertrain 1250 is not limited to these portholes, as it does not have rear-facing AC power inputs/outputs. These holes are intended to accommodate Voodoo Labs power supplies.
- 3) Tape template to Pedaltrain**
 - a. Once you have decided the location that is right for you, center the template on the underside of the Pedaltrain and tape it to the Pedaltrain.

IMPORTANT: The chassis of Powertrain 1250 is larger than the template. Therefore, the template must be centered in the open space. Make sure there is enough room around

the template to accommodate the chassis of the Powertrain 1250 to extend beyond the template. See photos:

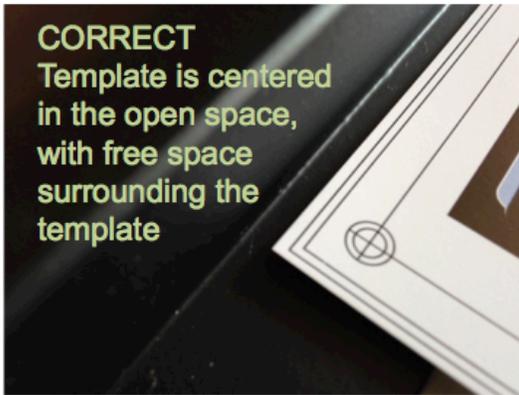

Correct Mounting Template Placement

- 3) **Establish drilling points.**
 - a. Use a sharp object to score the Pedaltrain frame, through the template, at the exact corners/bull's-eye located on each of the four corners.
- 4) **Use a 1/8 or 3mm drill to drill the holes.**
 - a. Take care to drill carefully, straight through, do not wiggle the drill and inadvertently bore out the hole (making it too big for the screws).
- 5) **Remove the corresponding screws from the bottom of the Powertrain 1250**
- 6) **Replace removed screws with "For Mounting" screws**
 - a. Use the included longer screws labeled "For Mounting" to pass through the topside of the Pedaltrain, through the frame, and into the open holes on the bottom of the Powertrain 1250. Tighten screws carefully, taking care not to strip them.



Mounting Screws Close-up



Mounting Screws Passing Through Pedaltrain